


T1013 Under Cab 7 Light


Precision Model Distributors, Inc.




Drill out self tapping holes to # 30 drill bit

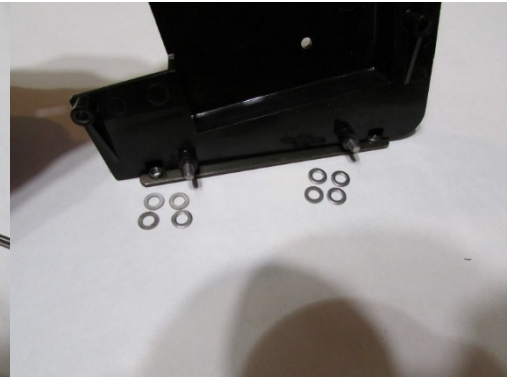


Install New m3 x 14mm bolts

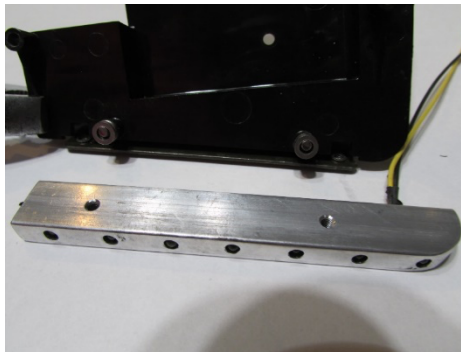

Install 4 Washers per Bolt to space Light Bar down

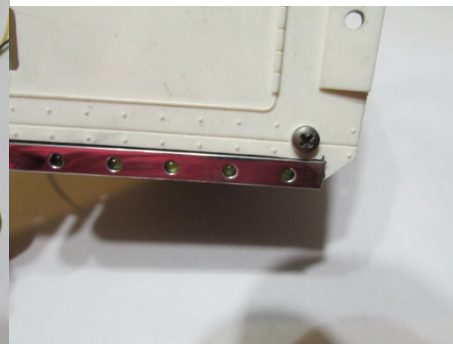

File Body to Clear Light Bar

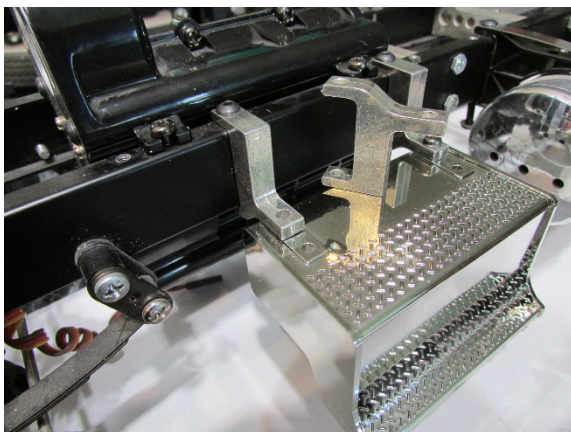

King Hauler

Install step mounts upside down for Cab to Step Clearance

Grand Haluer



©2022 Precision Model Distributors, Inc. All rights reserved worldwide

www.Gardentrucking.com 460-655-7950